



DPM2000 : System Monitor : TN # 10

It is highly recommended that while running the PrintersRIP, you have the System Monitor (RIP Monitor) window open. While having the window open isn't necessary for operating the RIP it is a VERY good idea. This window gives you and the Application Support team a lot of good feedback. Both the Output Controller window and the System Monitor window should be kept open.

To open the System Monitor pull down the "PrintersRIP" menu from the top menu bar, then highlight the **RIP Monitor** selection and then let go. This will put a check mark next to the words RIP Monitor and open the window. Resize the window so that it fits on the screen along with the Output Controller.

To open the Output Controller pull down the "Output" menu from the top menu bar, then highlight the **Output Controller** selection and then let go. This will put a check mark next to the words Output Controller and open the window. Resize the window so that it fits on screen along with the System Monitor.